

BTT - BTT-200 PROGRAMMING

The BTT-200 controller offers two modes for programming within the app: **TIMER** mode and **CYCLING** Mode.

- Timer mode allows watering at four different start times from 1 second to 24 hours (23 hrs., 59 min, 59 sec) per watering day.
- Cycling mode allows the Run Time to repeat continually after the scheduled interval (Soak Time) from a Start Time to an End Time.

Timer Mode

Press the **SCHEDULE** icon.

Select the **PENCIL** icon to edit the zone.

Select the desired **WATER DAYS**. Select one option of specific water days, interval, or Odd/Even days.

- Specific Days to Water Mode - Select days of the week to water. Click **SAVE**.
- Odd/Even Mode - Select Odd or Even. Click **SAVE**.
- Interval Mode - Select the days between watering (1-31). Select when you would like the interval to start. Click **SAVE**.
- Interval Note: The **Days Until Next Water** feature allows the user to start this interval today or between 1-30 days.


Set a **START TIME**. Click **SAVE**.

- Optional **START TIMES** 2, 3, and 4 will repeat the program.

Set the desired **RUN TIME** from 1 second to 24 hours (23 hrs., 59 min, 59 sec). Click **SAVE**.

Repeat steps for a second zone if applicable. The Time and Date are set on the mobile device.

 **IMPORTANT:** The **COPY TIMER SCHEDULE** icon at the bottom will allow you to duplicate the programming for the opposite zone.

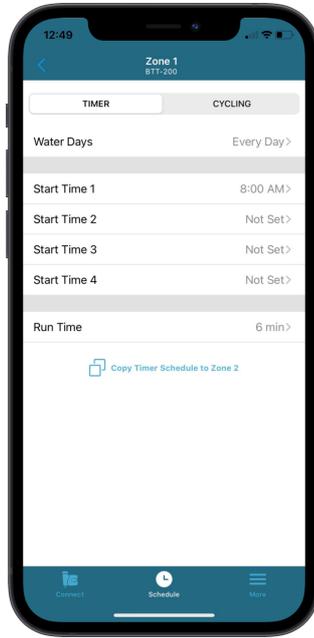

Cycle Mode

Press the **SCHEDULE** icon.

Select the **PENCIL** icon to edit the zone.

Select the **CYCLING** tab.

Select the desired **WATER DAYS**. Select one option of specific water days, interval, or Odd/Even days.

- Specific Days to Water Mode - Select days of the week to water. Click **SAVE**.
- Odd/Even Mode - Select Odd or Even. Click **SAVE**.
- Interval Mode - Select the days between watering (1-31). Select when you would like the interval to start. Click **SAVE**.
- Interval Note: The **Days Until Next Water** feature allows the user to start this interval today or between 1-30 days.

Set **START TIME 1** and click **SAVE**.

Set **END TIME 1** and click **SAVE**. If additional start times are required, repeat steps 5 and 6.

Set **END TIME 1**, if applicable, an optional **END TIME 2**. Click **SAVE**.

Set the desired **RUN TIME** from 1 second to 24 hours (23 hrs., 59 min, 59 sec). Click **SAVE**.

Set optional **SOAK TIME**. This is the time between each Run Time, from 1 second to 24 hours (23 hrs., 59 min, 59 sec). Click **SAVE**.

- Select **OFF** if soak time is not desired. If no soak time is selected, BTT will run continually from Start to End time.

Repeat steps for a second zone if applicable. The Time and Date are set on the mobile device.

 **IMPORTANT:** The **COPY CYCLING SCHEDULE** icon at the bottom will allow you to duplicate the programming for the opposite zone.

